

INCIZO® 5 IN 1

Now also to finish off your stairs!







WHY
QUICK • STEP®
INCIZO®?



5 DIFFERENT APPLICATIONS

with 1 product.

As an expansion profile to connect 2 floors of the same height.



As an adapter profile to connect a Quick•Step® floor with another type of floor covering which is lower



As an end profile next to e.g. a wall or a window.



As a transition to a carpet

NO INCONVENIENT

You always have the right

solution at hand.

in comparison with other types of multifunctional profiles.

SEAMS

PRACTICAL Value grante the

You create the profile you need for a perfect finish to your floor. Use the included slitter to cut your Incizo® profile to the desired shape.

ECONOMICAL

You can use any spare pieces of profile for other purposes, you won't have any excess profiles or leftovers.

CREATE STAIRS THAT FIT PERFECTLY INTO YOUR INTERIOR WITH INCIZO®



Applicable to many staircases

Straight or turning. With or without stair nose. Flush or non flush installation.

Simple and fast

No annoying demolition work. Facelift your stairs in less than a day!

Seamless and subtle

There's an incizo® profile for each Quick•Step® floor, with a perfectly matching colour. The result is a discrete and seamless transition to your floor.

Solid as a rock

The combination of a strong aluminium sub-profile, Quick*Step® One4All Glue, screws and the Quick*Step® Incizo® profile composed of quality materials, results in a solid stair solution you can rely upon.

Scratch-resistant surface.




SIMPLE AND FAST INSTALLATION



Start at the top of the stairs and work downwards.




Apply Quick*Step® One4All Glue to a panel and put it against the stair riser. The panel should come a bit lower than the stair tread. Put two spacers under the panel. This will enable you later to easily insert the tread plank under the stair riser plank.

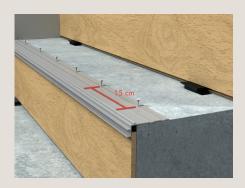

Glue and screw the aluminium sub-profile to the stairs.




Apply glue to the sub-profile and the rest of the stair tread. Make sure the glue is well spread on the sub-profile.

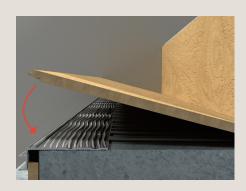

Install a Quick-Step® panel on the stair tread by positioning it against the upright part of the subprofile.



Push the rubber insert into the groove of the Incizo® profile. Apply glue on both sides of the Incizo® foot.

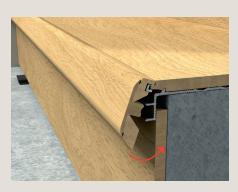

Now, stick the Incizo® profile onto its sub-profile and position it nicely for a level transition with the rest of the tread. Repeat the installation for the rest of the stairs.

Visit the Quick•Step® website to find more detailed installation instructions.

Ask your dealer for advice on the correct aluminium sub-profile for the Quick•Step® floor of your choice.

(sub-profile to be ordered separately)



A VARIETY IN STAIR FINISHES WITH ONE AND THE SAME PROFILE

TRUE QUICK·STEP® STAIRS



Finish both the treads and the stair risers with Quick•Step® planks. The result is a stylish eye-catcher that perks up your interior.

PAINTED STAIR RISERS



Finishing stairs with painted stair risers is possible. Paint e.g. the stair riser in a colour which contrasts with the rest of your stairs, to accentuate your staircase.

STAIRS WITH STAIR NOSES

Finishing stairs with stair noses is easy. Here again you can have the stair risers finished with Quick•Step® planks, or opt for paint.







Spacers not offered by Quick•Step®



Spacers not offered by Quick•Step®

MODERN STAIRS WITH CLEAN LINES



Straight lines are another option. Use the included slitter to cut off a part of the Incizo® profile. The result is nice flat stair risers.

A NON-FLUSH INSTALLATION



There is also an Incizo® solution for this. Simply turn around the aluminium subprofile, so the short leg is resting on the stair tread. Cut off a part of the Incizo® profile with the Incizo® slitter. Stick the Incizo® profile onto its sub-profile. Ready!*

* Non-flush installation is required e.g. when the Incizo® profile covers a transition to an existing floor.

OPEN STAIRCASES

You can use the Incizo® profile to obtain a perfect finish for half-open stairs.*



* Only for laminate floors. Incizo® can be used at the side of the planks with a tongue.

Alternatively, use the Quick•Step® self-adhesive laminates to finish both sides of the stairs.**



** Only for laminate floors.

Visit the Quick-Step® website www.quick-step.com:

- √ Watch the new Incizo® 5in1 installation video.
- Find more detailed installation instructions for stair finishing with Incizo[®].



